

MBC-510 SPRAY GUN

IMPORTANT: Before using this equipment, read all safety precautions and instructions. Keep for future use.

Note

This gun may be used with chlorinated solvents. Aluminum is not used in the fluid passage areas.

DESCRIPTION

The MBC-510 standard spray gun has a removable sprayhead; nickel plated brass fluid passages; a stainless steel fluid tip and needle to reduce wear; forged aluminum gun body; large air and fluid passages for high capacity use and a cartridge type air valve to minimize repairs.

Nozzle combinations are listed in Chart 1. Refer to the Spray Gun Catalog, I-2008, for information regarding air cap and fluid tip characteristics.

OPERATION

Strain material thru 60 or 90 mesh screen.

Adjust fluid pressure to deliver the desired paint volume. Adjust air pressure and flow to provide a uniform dispersion of atomized paint throughout the pattern. Keep air pressure as low as possible to minimize bounce - back and overspray. Excessive fluid flow will result in heavy center spray patterns. Inadequate flows may cause the pattern to split. See Spray Gun Guide, SB-2-001, which is available upon request, for details concerning set up of spray guns.

PREVENTIVE MAINTENANCE

To clean air cap and fluid tip, brush exterior with a stiff bristle brush. If necessary to clean cap holes, use a broom straw or toothpick. **Never use a wire or hard instrument.** This may scratch or burr holes causing a distorted spray pattern.

To clean fluid passages, remove excess material at source, then flush with a suitable solvent using a device such as the SolventSaver™ (see Accessories). Wipe gun exterior with a solvent dampened cloth. Never completely immerse in solvent as this is detrimental to the lubricants and packings.

Note

When replacing the fluid tip or fluid needle, replace both at the same time. Using worn parts can cause fluid leakage. For thinner, less viscous materials a lapped tip and needle set is recommended. See Chart 3. Also, replace the needle packing at this time. Lightly lubricate the threads of the fluid tip before reassembling. Torque to 20-25 ft. lbs. Do not over tighten the fluid tip.



To prevent damage to the fluid tip (5) or fluid needle (11), be sure to either 1) pull the trigger and hold while tightening or loosening the fluid tip or 2) remove fluid needle adjusting screw (32) to relieve spring pressure against needle collar.

SPRAY GUN LUBRICATION

Daily, apply two drops of •SSL-10 spray gun lube (see Accessories) at trigger bearing stud (34) and the stem of the air valve (15) where it enters the air valve assembly. The shank of the fluid needle (11) where it enters the packing nut (10) should also be oiled. The fluid needle packing (9) should be kept soft and pliable by periodic lubrication. Make sure the sprayhead (8) and retaining ring (1 or 2) threads are clean and free of foreign material. Before assembling retaining ring to sprayhead, clean the threads thoroughly, then add two drops of SSL-10 spray gun lube to threads. The fluid needle spring (31) and air valve spring (16) should be coated with a very light grease, making sure that any excess grease will not clog the air passages. For best results, lubricate the points indicated, daily.

• Safety Data Sheet available from DeVilbiss upon request.

- A. Trigger Points
- B. Packing
- C. Adjusting Valves
- D. Threads

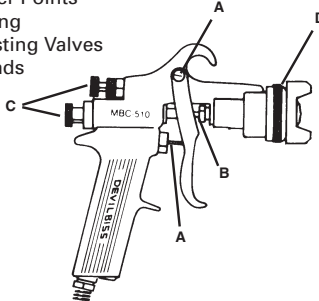


CHART 1

| Nozzle Combinations | | | | | | |
|----------------------------------|---|---|-----|----|----|----|
| Air Cap Sizes Order From Chart 2 | Fluid Tip and Needle Sizes Order From Chart 3 | | | | | |
| | AC | D | E | EX | FF | FX |
| 24 | | P | P | | | P |
| 30 | | | P | S | P | P |
| 58 | | | P/S | S | P | P |
| 62HD | P | | | | | |
| 64HD | | | P | | | |
| 69HD | | P | | | | |
| 80 | | | | S | | |
| 704 | | | P | | P | |
| 765 | | | P | | P | P |
| 777 | | | P | | P | |
| 797 | | | P | | P | |
| 9000 | | | | S | | |

P - Pressure Feed Combination
S - Suction Feed Combination

CHART 2

| Air Caps | | |
|------------------|---------------------------------|--------------------------------|
| No. on Cap Order | Ref. Nos. (1) Air Cap with Ring | Ref. No. (3) Air Cap Less Ring |
| 24 | | AV-40-24 |
| 30 | MB-4039-30 | |
| 58 | AV-439-58 | |
| 62HD | MB-4039-62HD | |
| 64HD | MB-4039-64HD | |
| 69HD | MB-4039-69HD | |
| 80 | MB-4039-80 | |
| 704 | | AV-1239-704 |
| 765 | | AV-1239-765 |
| 777 | | 31767-777 |
| 797 | | AV-1239-797 |
| 9000 | AV-440-9000 | |



PROP 65 WARNING
WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

IMPORTANT! DO NOT DESTROY

It is the Customer's responsibility to have all operators and service personnel read and understand this manual. Contact your local DeVilbiss representative for additional copies of this manual.

READ ALL INSTRUCTIONS BEFORE OPERATING THIS DEVILBISS PRODUCT.

SAFETY PRECAUTIONS

This manual contains information that is important for you to know and understand. This information relates to USER SAFETY and PREVENTING EQUIPMENT PROBLEMS. To help you recognize this information, we use the following symbols. Please pay particular attention to these sections.



Important safety information - A hazard that may cause serious injury or loss of life.

Important information that tells how to prevent damage to equipment, or how to avoid a situation that may cause minor injury.

Note

Information that you should pay special attention to.



The following hazards may occur during the normal use of this equipment. Please read the following chart before using this equipment.





| HAZARD | CAUSE | SAFEGUARDS |
|--|--|---|
|  <p>Fire</p> | Solvent and coatings can be highly flammable or combustible especially when sprayed. | <p>Adequate exhaust must be provided to keep air free of accumulations of flammable vapors.</p> <p>Smoking must never be allowed in the spray area.</p> <p>Fire extinguishing equipment must be present in the spray area.</p> |
|  <p>Solvent Spray</p> | During use and while cleaning and flushing, solvents can be forcefully expelled from fluid and air passages. Some solvents can cause eye injury. | Wear eye protection. |
|  <p>Inhaling Toxic Substances</p> | Certain materials may be harmful if inhaled, or if there is contact with the skin. | <p>Follow the requirements of the Safety Data Sheet supplied by your coating material manufacturer.</p> <p>Adequate exhaust must be provided to keep the air free of accumulations of toxic materials.</p> <p>Use a mask or respirator whenever there is a chance of inhaling sprayed materials. The mask must be compatible with the material being sprayed and its concentration. Equipment must be as prescribed by an industrial hygienist or safety expert, and be NIOSH approved.</p> |
|  <p>Explosion Hazard - Materials</p> | Halogenated hydrocarbon solvents - for example; methylene chloride and 1, 1, 1 - Trichloroethylene are not chemically compatible with the aluminum that might be used in many system components. The chemical reaction caused by these solvents reacting with aluminum can become violent and lead to an equipment explosion. | The MBC-510 can be used with these solvents. However, aluminum is widely used in other spray application equipment - such as material pumps, regulators, valves and cups. Check all equipment items before use and make sure they can also be used safely with these solvents. Read the label or data sheet for the material you intend to spray. If in doubt as to whether or not a coating or cleaning material is compatible, contact your material supplier. |
| General Safety | Improper operation or maintenance of equipment. | Operators should be given adequate training in the safe use & maintenance of the equipment (in accordance with the requirements of NFPA-33, Chapter 15). Users must comply with all local & national codes of practice & insurance company requirements governing ventilation, fire precautions, operation, maintenance and housekeeping. These are OSHA Sections 1910.94 and 1910.107 and NFPA-33. |
| <p>Cumulative Trauma Disorders ("CTD's") musculo-skeletal disorders, involve damage to the hands, wrist, elbows, shoulders, neck and back. Carpal tunnel syndrome and tendinitis (such as tennis elbow or rotator cuff syndrome) are examples of CTD's.</p> | <p>Use of hand tools may cause cumulative trauma disorders ("CTD's").</p> <p>CTD's when using hand tools, tend to affect the upper extremities. Factors which may increase the risk of developing a CTD include:</p> <ol style="list-style-type: none"> 1. High frequency of the activity. 2. Excessive force, such as gripping, pinching, or pressing with the hands and fingers. 3. Extreme or awkward finger, wrist, or arm positions. 4. Excessive duration of the activity. 5. Tool vibration. 6. Repeated pressure on a body part. 7. Working in cold temperatures. <p>CTD's can also be caused by such activities as sewing, golf, tennis, bowling, to name a few.</p> | <p>Pain, tingling, or numbness in the shoulder, forearm, wrist, hands or fingers, especially during the night, may be early symptoms of a CTD's, or CTD. Do not ignore them. Should you experience any such symptoms, see a physician immediately. Other early symptoms may include vague discomfort in the hand, loss of manual dexterity, and nonspecific pain in the arm. Ignoring early symptoms and continued repetitive use of the arm, wrist & hand can lead to serious disability. Risk is reduced by avoiding or lessening factors 1-7.</p> |

CHART 3

| Fluid Tips | | | |
|-------------------------------|---|-------------------------------|-----------------------------|
| Ref. No. 5 S/S Fluid Tip • | Optional: 303 S/S Tip with UHMW Seat • | Ref. No. 4 Sprayhead Assy. | Ref. No. 11 Fluid Needle |
| | No. on Tip 5 | | |
| AV-2115-AC | | — | MBC-496-C |
| AV-2115-D | AV-4915-D | P-MBC-430-D | MBC-496-DEX |
| AV-2115-E | AV-4915-E | P-MBC-430-E | MBC-444-E |
| AV-2115-EX | | P-MBC-430-EX | MBC-496-DEX |
| AV-2115-FF | AV-4915-FF | P-MBC-430-FF | MBC-444-FF |
| AV-2115-FX | | P-MBC-430-FX | MBC-444-FX |

• RECOMMENDED GASKET KIT AV-1-K5.


PARTS LIST

| Ref. No. | Replacement Part No. | Description | Individual Parts Required |
|----------|----------------------|--|---------------------------|
| 1 | See Chart 2 | Air Cap/Retaining Ring | 1 |
| 2 | MBC-368 | Retaining Ring for Ref. No. 3 & 4 | 1 |
| 3 | See Chart 2 | Air Cap Less Retaining Ring | 1 |
| 4 | See Chart 3 | Sprayhead Assembly | 1 |
| 5 | See Chart 3 | Fluid Tip | 1 |
| •6 | AV-1-K5 | Gasket Kit (Kit of 5) | 1 |
| 7 | MBC-1225 | Baffle | 1 |
| 8 | P-MBC-402 | Sprayhead Body | 1 |
| •9 | A-23-K10 | Packing Kit (Kit of 10) | 1 |
| 10 | MB-19-K5 | Packing Nut Kit (Kit of 5) | 1 |
| 11 | See Chart 3 | Fluid Needle | 1 |
| •12 | --- | Snap Ring | 1 |
| •13 | --- | Washer | 1 |
| •14 | --- | U-Cup | 1 |
| •15 | --- | Air Valve | 1 |
| •16 | --- | Spring | 1 |
| •17 | JGS-72-K10 | Gasket Kit (Kit of 10) | 1 |
| 18 | JGS-449-1 | Valve Assembly | 1 |
| •19 | MBC-1226-K10 | Gasket Kit (Kit of 10) | 1 |
| 20 | MBC-67 | Locking Bolt | 1 |
| 21 | MBC-498-1 | Fan Adjustment Valve | 1 |
| 22 | --- | Washer | 1 |
| •23 | --- | Packing | 1 |
| 24 | --- | Packing Nut | 1 |
| 25 | --- | Knob | 1 |
| •26 | --- | Screw | 1 |
| 27 | MBC-415 | Cylinder Assembly | 1 |
| •28 | CV-5-K5 | Gasket Kit (Kit of 5) | 1 |
| 29 | --- | Cylinder | 1 |
| 30 | MBC-33 | Plunger | 1 |
| •31 | MBC-29-K5 | Spring (Kit of 5) | 1 |
| 32 | MBC-39 | Screw | 1 |
| 33 | P-MB-51 | Air Inlet Adapter 1/4" NPS | 1 |
| 34 | --- | Trigger Bearing Stud | 1 |
| •35 | --- | Screw | 1 |
| 36 | JGS-478 | Stud and Screw Kit (3 studs, 5 screws in kit) | 1 |
| 37 | JGS-477-1 | Trigger, Stud and Screw Kit (Kit includes 1 each) | 1 |
| #38 | P-MBC-428-3 | Spray gun less spray head | 1 |

• A quantity of necessary parts is included in repair kit KK-4058-1 for complete gun repair and should be kept on hand for service convenience.



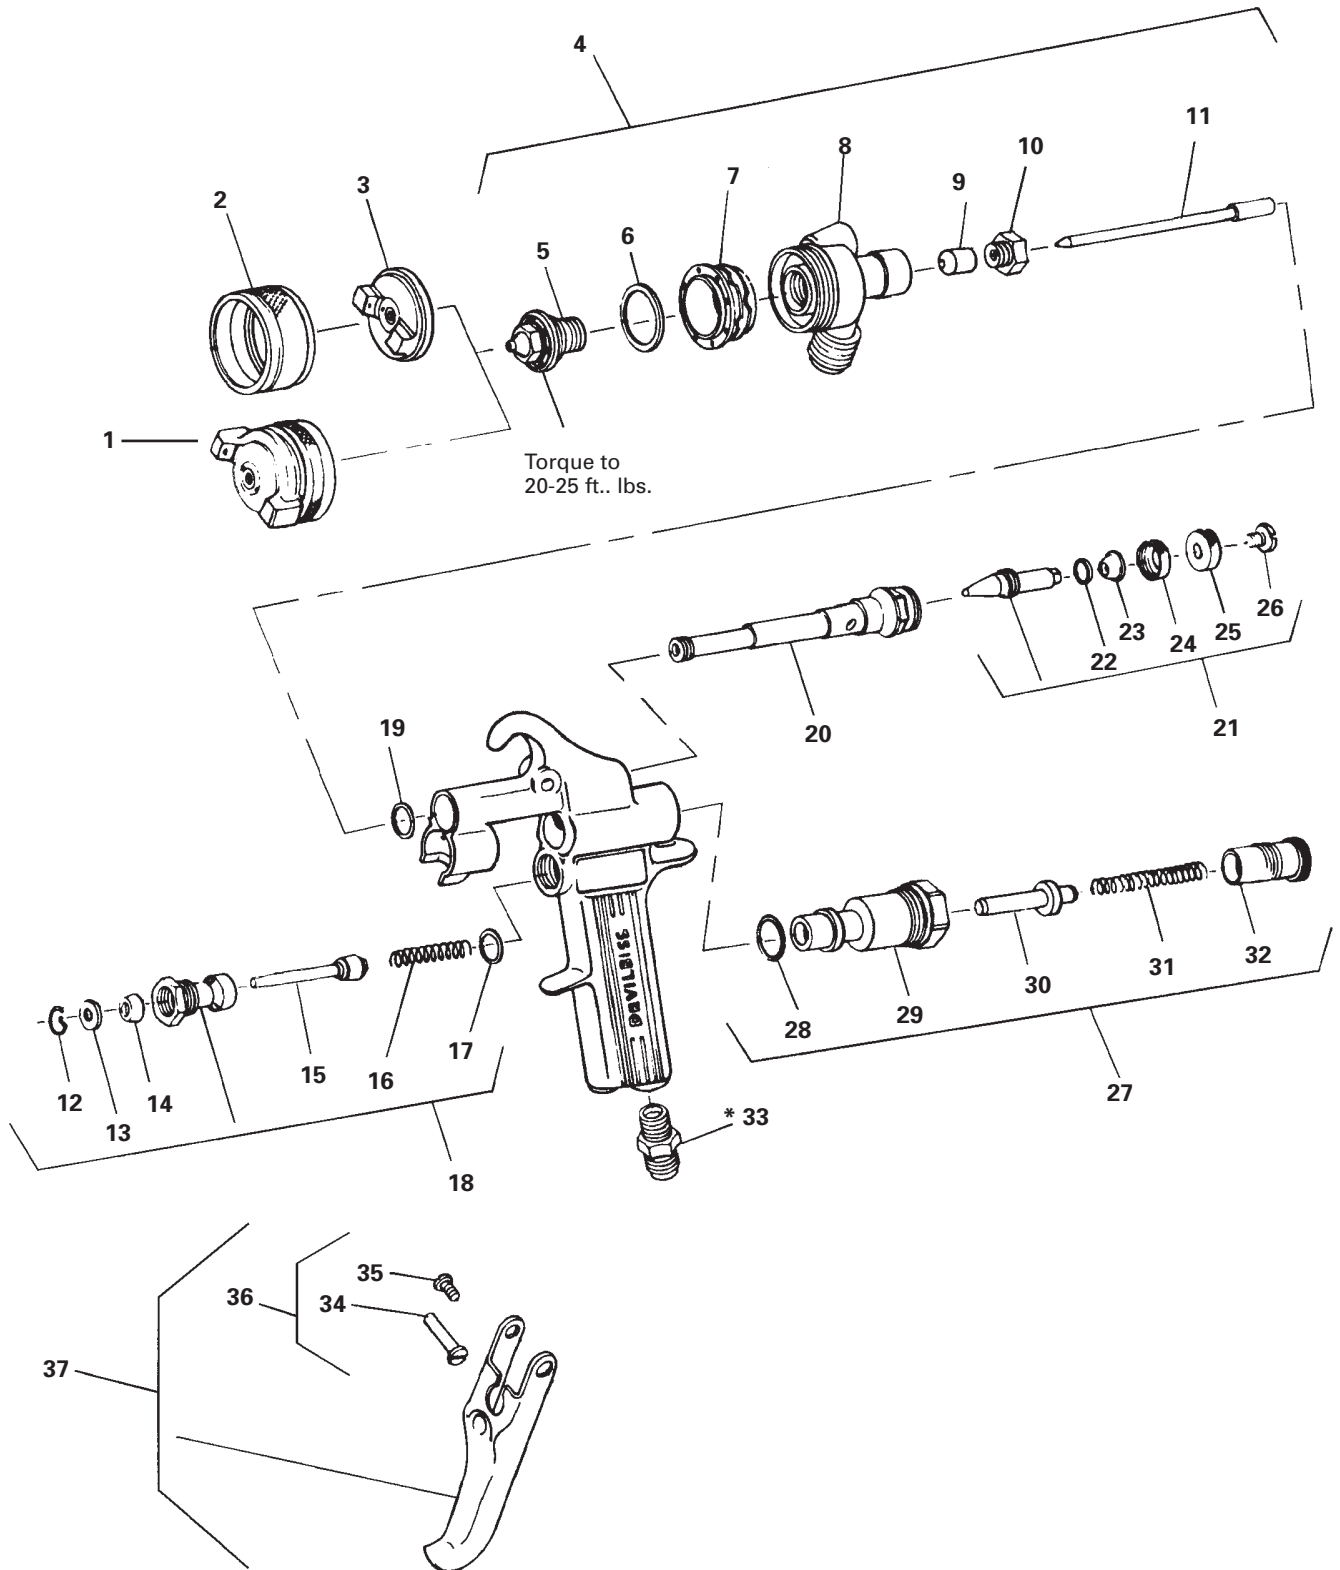


Ref. No. 38 includes Ref. Nos. 12-37.

Suffixes -K5 and -K10 designates kits of multiple parts.
Example: AV-1-K5 is a kit of 5 gaskets.



*Apply thread sealant (i.e. Loctite 242, blue or equal) on threads.

TROUBLESHOOTING

| CONDITION | CAUSE | CORRECTION |
|--|---|--|
| Heavy top or bottom pattern  | Horn holes plugged. Obstruction on top or bottom of fluid tip. Cap and/or tip seat dirty. | Clean. Ream with non-metallic point. Clean. Clean. |
| Heavy right or left side pattern  | Left or right side horn holes plugged. Dirt on left or right side of fluid tip. Remedies for the top-heavy, bottom-heavy, right-heavy and left-heavy patterns: 1) Determine if the obstruction is on the air cap or the fluid tip. Do this by making a test spray pattern. Then, rotate the cap one-half turn and spray another pattern. If the defect is inverted, obstruction is on the air cap. Clean the air cap as previously instructed. 2) If the defect is not inverted, it is on the fluid tip. Check for a fine burr on the edge of the fluid tip. Remove with #600 wet or dry sand paper. 3) Check for dried paint just inside the opening. Remove paint by washing with solvent. | Clean. Ream with non-metallic point. Clean. |
| Heavy center pattern  | Too much material. Material too thick. | Reduce fluid flow on suction guns. Reduce fluid pressure on pressure feed guns . Thin to proper consistency. |
| Split spray pattern  | Not enough material. | Reduce air pressure or increase fluid flow by turning fluid needle adjusting screw counter clockwise on suction feed, increase fluid pressure on pressure feed guns. |
| Jerky or fluttering spray  | *Loose or damaged fluid tip/seat. Insufficient fluid in cup or pressure tank. Gun (with cup) tipped at excessive angle. Obstructed fluid passage or hose. Loose or cracked fluid tube in cup or tank. Too heavy fluid for suction feed. Dry or worn packing (14) or loose packing nut (15). | Tighten or replace. Fill cup or tank. Do not tip excessively or rotate fluid tube. Clean. Tighten or replace. Change to pressure feed. Lubricate or replace. Tighten. |
| Unable to get round spray | Fan adjustment screw not seating properly. Air cap retaining ring loose. | Clean or replace. Tighten. |
| Will not spray | No air pressure at gun. Internal mix or pressure feed air cap and tip used with suction feed. Fluid pressure too low with internal mix cap and pressure tank. Fluid needle adjusting screw not open enough. Fluid too heavy for suction feed. | Check air supply and air lines. Change to proper suction feed air cap and tip. Increase fluid pressure at tank. Open fluid needle adjusting screw. Thin material or change to pressure feed. |
| Fluid leaking from packing nut | Packing nut loose. Packing worn or dry | Tighten, do not bind needle. Replace or lubricate. |
| Dripping from fluid tip | Dry packing. Sluggish needle. Tight packing nut. Sprayhead misaligned, causing needle to bind. | Lubricate. See "Preventive Maintenance". Lubricate. See "Preventive Maintenance". Adjust. See "Preventive Maintenance". Tap all around sprayhead with wooden mallet and retighten locking bolt. |

*Most common problem.

ACCESSORIES

WR-103 Wrench




Contains all necessary tip, hose and nut sizes used on or with gun.

42884-214-K5 3/8" 42884-215-K10 5/8" Cleaning Brushes




These brushes are helpful in cleaning threads and recesses of gun body.

HD-503 SolventSaver™ Hose/Gun Cleaner

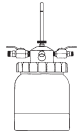

2 Qt. & 2-1/2 Gal hose/gun cleaner used to clean the inside of hose, fluid passageways of gun & other paint equipment.

183GZ-5200 SolventSaver™ Hose/Gun Cleaners

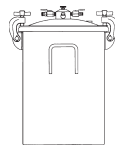

2 Gallon galvanized tank used to clean the inside of hose and material passageways of the gun.

JGA-156-K10 Spring Clip



Joins any single piece DeVilbiss air cap with latest version MBC-368 or MSA-1 retaining ring. Helps prevent parts loss and provides easier assembly.

Spray Gun Lube SSL-10 (2 oz. bottle)




Compatible with all paint materials: contains no silicone or petroleum distillates to contaminate paint. Safety Data Sheet available upon request.

HAV-500 OR HAV-501 Adjusting Valve (HAV-501 SHOWN)



HAV-500 does not have pressure gage. Use to control air usage at gun.

VS-531 Low Pressure Strainers

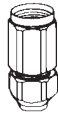


The VS-531 Low Pressure Fluid Strainer provides a final filter for trapping foreign particles in the paint supply.

MB-135-K9 Leather Packings



Optional packings used commonly with abrasive materials. Use (3) in place of A-23 packing.

HARG-510 Air Regulator

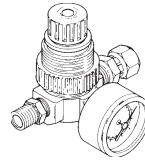

Use to maintain nearly constant outlet pressure despite changes in inlet pressure and downstream flow.

29-3100 Scrubs® Hand Cleaner Towels




Scrubs® are a pre-moistened hand cleaner towel for painters. No water is needed.

Millennium 3000 Twin Cartridge Paint Spray Respirator




NIOSH-Certified, for respiratory protection in atmospheres not immediately dangerous to life.

P-H-5516 Air Adjusting Valve

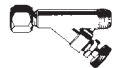


Enables user to control and reduce air usage at the gun. Ideal for low pressure spraying.

HAF-507 Whirlwind™ In-Line Air Filter

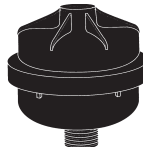

Removes water, oil, and debris from the air line.

Quick Disconnect Approved for HVLP Guns (Air) High Flow Ball and Ring Type

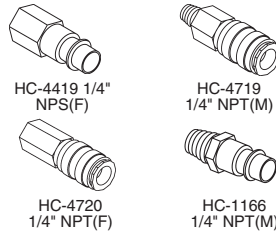


HC-4419 1/4" NPS(F)

HC-4719 1/4" NPT(M)

HC-4720 1/4" NPT(F)


HC-1166 1/4" NPT(M)

KB-555 (Aluminum) & KB-545-SS (S/S) 2 qt. Pressure Feed Cup With Regulator

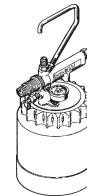


Provides greater degree of control over cup fluid pressure.

TGC-545 (Aluminum) TLC-555 (Non-stick coating) TSC-595 S.S. 1 Qt. Drip-Free Suction Cup

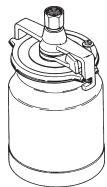

Cup has a unique, two position valve which permits selection of either a drip-free or conventional open vent mode.

192212 Professional Spray Gun Cleaning Kit

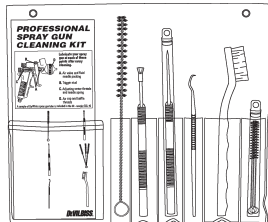

Contains six precision tools designed to effectively clean all DeVilbiss, Binks, Finishline and other brand spray guns.

NOTES

WARRANTY POLICY

DeVilbiss products are covered by Carlisle Fluid Technologies one year materials and workmanship limited warranty. The use of any parts or accessories, from a source other than Carlisle Fluid Technologies, will void all warranties. For specific warranty information please contact the closest Carlisle Fluid Technologies location listed below.

Carlisle Fluid Technologies reserves the right to modify equipment specifications without prior notice. DeVilbiss®, Ransburg®, MS®, BGK®, and Binks® are registered trademarks of Carlisle Fluid Technologies, Inc.

©2017 Carlisle Fluid Technologies, Inc.
All rights reserved.

DeVilbiss is part of Carlisle Fluid Technologies, a global leader in innovative finishing technologies. For technical assistance or to locate an authorized distributor, contact one of our international sales and customer support locations.

USA/Canada

info@carlisleleft.com
Tel: 1-888-992-4657
Fax: 1-888-246-5732

Mexico

ventas@carlisleleft.com.mx
Tel: +52 55 5321 2300
Fax: +52 55 5310 4790

Germany

info@carlisleleft.eu
Tel: +49 (0) 6074 403 1
Fax: +49 (0) 6074 403 281

United Kingdom

info@carlisleleft.eu
Tel: +44 (0)1202 571 111
Fax: +44 (0)1202 573 488

Japan

overseas-sales@carlisleleft.co.jp
Tel: +81 45 785 6421
Fax: +81 45 785 6517

Australia

sales@carlisleleft.com.au
Tel: +61 (0) 2 8525 7555
Fax: +61 (0) 2 8525 7575

China

mkt@carlisleleft.com.cn
Tel: +8621-3373 0108
Fax: +8621-3373 0308

Brazil

vendas@carlisleleft.com.br
Tel: +55 11 5641 2776
Fax: +55 11 5641 1256

For the latest information about our products, visit www.carlisleleft.com.