


Operating Instructions and Spare parts list

# EasyFlow Powder injector



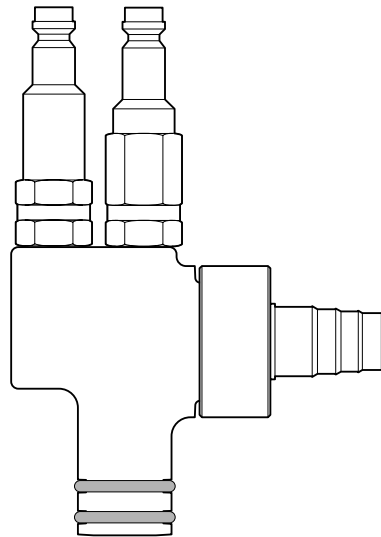

## Table of Contents

<b>EasyFlow - plug-in Injector for organic Powder</b> .....	<b>1</b>
Field of application .....	1
Function of the Injector and the influence of the Supplementary air .....	2
Setting table for EasyFlow Injector .....	3
<b>Injector cleaning</b> .....	<b>4</b>
a) At the start every Working day/shift or at a Colour change .....	4
b) Cleaning the Check valve .....	5
<b>Troubleshooting Guide</b> .....	<b>5</b>
<b>Spare parts list EasyFlow Injector</b> .....	<b>6</b>




## EasyFlow plug-in Injector for organic Powder

### Field of application

The EasyFlow Injector is used to convey conventional organic powder from the powder hopper to the powder gun. The injector is supplied with a Teflon insert sleeve as standard. The patented wear-resistant insert sleeve, which can be ordered separately, is recommended for use with very abrasive powder types.

The EasyFlow Injector is the plug-in type, which permits simple handling, and quick cleaning. All connections are plug-in and are non-interchangeable. The injector can be dismantled without special tools.

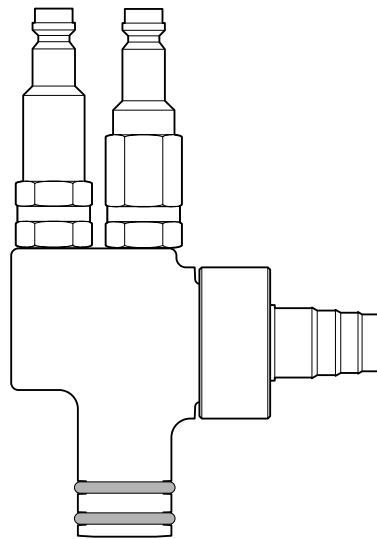

EasyFlow Powder Injector with detachable, coded quick-release connections for the pneumatic hoses

Figure 1

**Function of the Injector and the influence of the Supplementary air**

Air flowing from a nozzle into a cavity with an outlet opening placed in the continuation of the air stream, causing under pressure to develop (see Figure 2 below). This effect is used to suck powder up into the suction tube, creating a powder/air mixture.

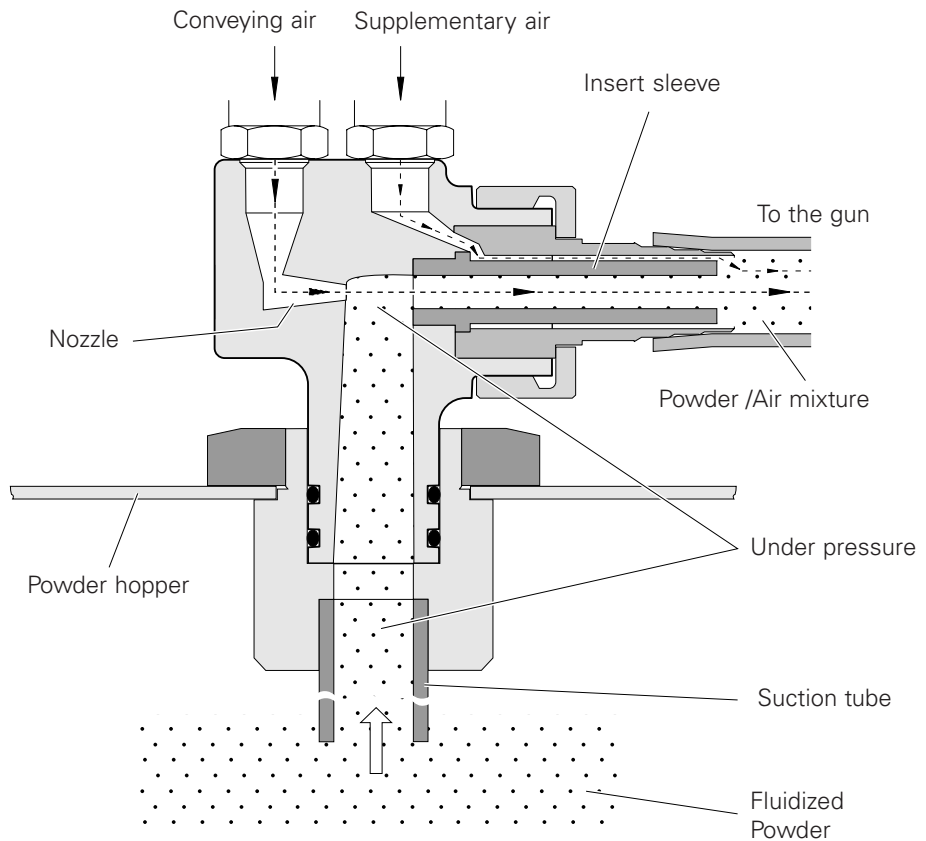


Figure 2

This passes through the powder hose to the gun. The concentration of the powder/air mixture and with this the strength of the powder output is dependent on the conveying, and supplementary air volume, the nature of the powder, the powder hose length, the powder hose diameter, the number of powder hose turns, the height difference between the gun and injector, and also the type of nozzle. The condition of the insert sleeve is of great importance because when it starts to show signs of wear the powder output is drastically reduced.

Experience with the pneumatic conveying technology shows, that for the pneumatic transport of fine solid matter like powder in a tubular construction, for example, a hose, a certain air volume per time unit is necessary. With an  $\varnothing$  11 mm hose this value is approximately 4 m<sup>3</sup>/h. In order to decrease the powder output, the under pressure in the injector cavity must be reduced, in that the conveying air pressure is reduced. With the reduction of the conveying air pressure the air volume in the powder hose also sinks below the optimum value of 4 m<sup>3</sup>/h, the powder transport becomes irregular, the so-called "pumping" commences. In order to prevent this, supplementary air is added, until the total air volume in the powder hose is 4-5 m<sup>3</sup>/h again. This takes place fully-automatically in the EasyTronic control unit.

## Powder volume Setting table for EasyFlow Injector

In order to set ideal powder volume on the EasyTronic it is recommended, to first to choose the "hardness" of the powder cloud or the **Total air** volume.

The following guide values can be used for the different powder hose diameters:



- Powder hose - 1004 ID 11 mm **4-5 m<sup>3</sup>/h**  
(Order number 103 128)
- Powder hose - 1005 ID 12 mm **5-6 m<sup>3</sup>/h**  
(Order number 100 080)

Depending on the conditions (powder, powder hose layout, workpieces to be coated) low to the lowest Total air volumes can also be set with the 1004 - ID 11 mm standard powder hose.

If a very large powder output is required it is recommended to select the larger powder hose inside diameter (ID) - (ø 12 mm). Shortening the powder hose length from 6 to 3 m also achieves the desired result (see the table below)



**It is to be noted that with irregular or "pumping" powder transport, as a rule the Total air volume is set too low**

All values in this table are guide values only. Different environmental conditions, wear and different types of powder can cause the values to differ from those below.

Powder hose length [m]		6			6		3
Powder hose ø [mm]		11			12		12
Powder hose No.		1004			1005		1005
Total air volume [Nm <sup>3</sup> /h]		4	5	6	5	6	6
		Powder output [g/min]					
Powder volume [%]	10		24	37	48	56	102
	20		60	80	81	101	150
	30	65	90	130	116	165	224
	40	98	140	185	162	231	290
	50	131	188	230	217	282	356
	60	169	240	282	274	346	420
	70	208	287	333	330	400	486
	80	250	334	382	385	458	542
	90	297	385	427	440	504	584
	100	330	433	477	490	544	610




Figure 3

## Injector cleaning

### a) At the start every Working day/shift or at a Colour change

1. Remove the injector from the powder hopper
2. Remove the powder hose from hose connection (4)
3. Clean the hose connection (4) with compressed air, free from oil and water, and check for wear
4. Clean the injector housing (1) with compressed air, free from oil and water. Contamination is visible through the opening of the powder hopper connection (2).
5. Replace the injector

**Attention: Dismantle the injector when extremely dirty:  
Unscrew the check valves (6 and 7) with the correct size spanners.  
Clean individual parts with compressed air, when necessary  
dissolve possible sintering in Nitro thinners. Do not use Acetone.  
Never scrape off!**

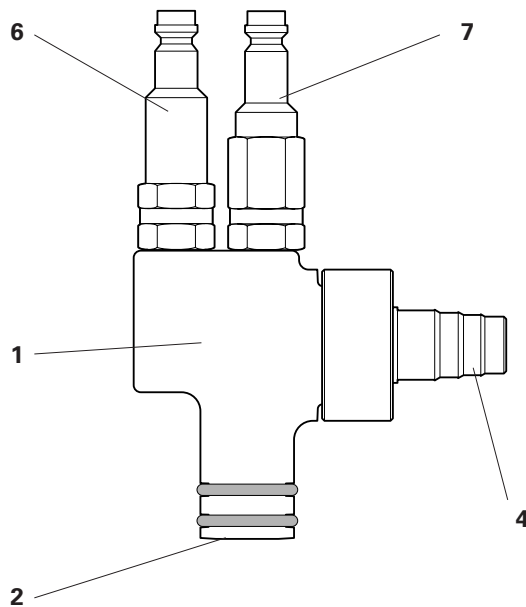

- |   |                          |   |                                 |
|---|--------------------------|---|---------------------------------|
| 1 | Injector housing         | 6 | Check valve (Conveying air)     |
| 2 | Powder hopper connection | 7 | Check valve (Supplementary air) |
| 4 | Powder hose connection   |   |                                 |

Figure 4





**Spare parts list EasyFlow Injector**

	EasyFlow Injector (complete, without Items 3.1, 8 - 11)	377 740
1	Injector housing (without Item 2)	377 732
2	O-Ring - $\varnothing$ 16 x 2 mm	231 517
3	Insert sleeve - Teflon	377 724#
3.1	Insert sleeve - Glass	377 767#
4	Hose connection	377 716#
5	Threaded sleeve	377 708
6	Check valve - Conveying air (red marking) (complete - incl. Items <b>6.1</b> and <b>6.2</b> )	261 211
6.1	Ball	240 168
6.2	Spring	240 176
7	Check valve - Supplementary air (black marking) (complete - incl. Items <b>6.1</b> and <b>6.2</b> )	261 203
8	Quick-release connector (red) for Conveying air hose - $\varnothing$ 8 / 6 mm	261 645
9	Quick-release connector for Supplementary air hose - $\varnothing$ 8 / 6 mm	261 637
10	Plastic hose - $\varnothing$ 8 / 6 mm (red)	103 500*
11	Plastic hose - $\varnothing$ 8 / 6 mm (black)	103 756*
	Powder hose - 1104 - $\varnothing$ 16 / 11 mm (standard)	103 128*#
	Powder hose - 1005 - $\varnothing$ 20 / 12 mm	100 080*#

# Wear parts

\* Indicate length required

**Spare parts list EasyFlow Injector**

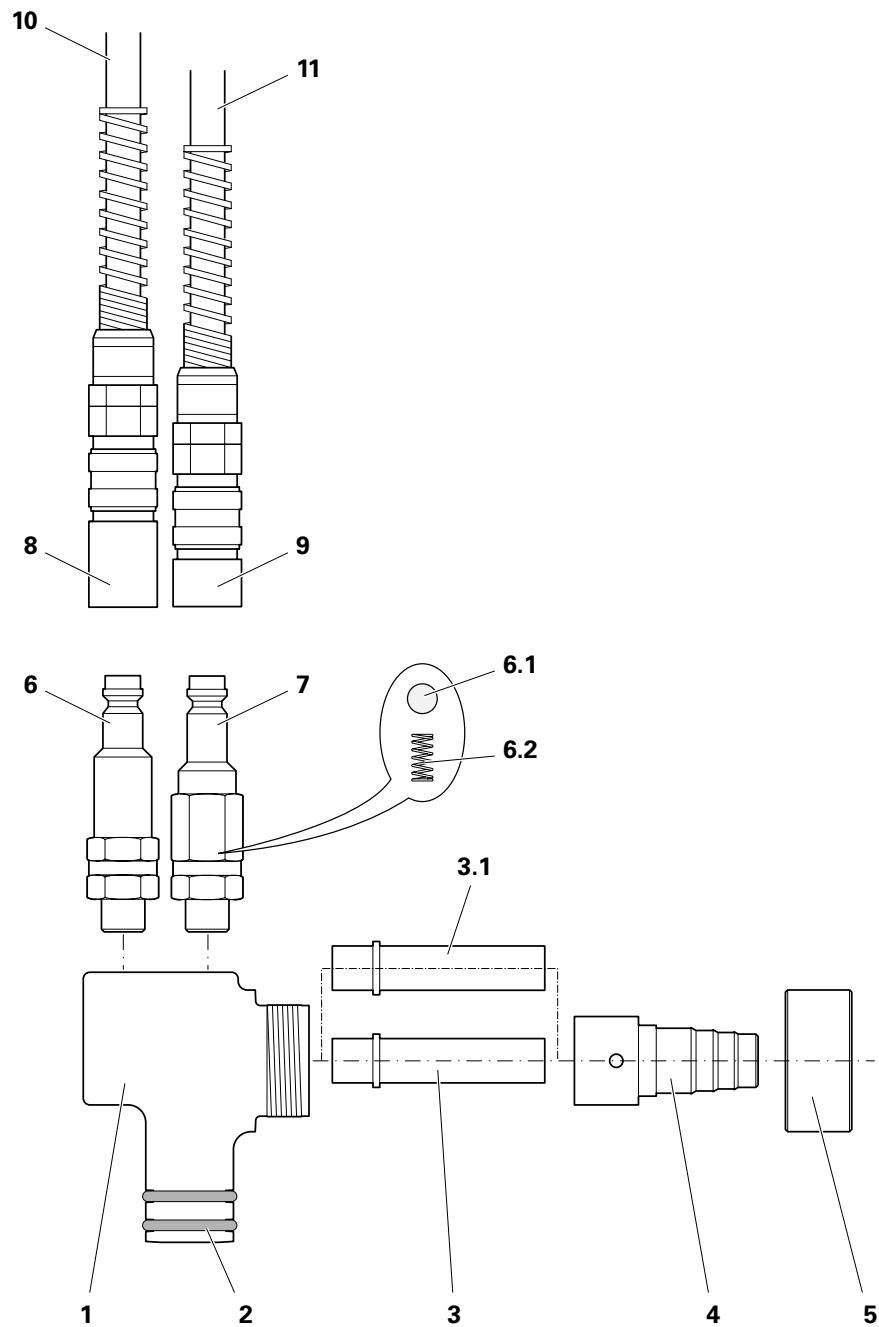


Figure 6

## **Documentation EasyFlow**

© Copyright 1999 ITW Gema AG., CH-9015 St. Gallen  
All rights reserved.

This publication is protected by copyright. Unauthorized copying is prohibited by law. No part of this publication may be reproduced, photocopied, translated, stored on a retrieval system or transmitted in any form or by any means, for any purpose, neither as a whole nor partially, without the express written consent of ITW Gema AG. OptiTronic, OptiGun, EasyTronic, EasySelect, EasyFlow and SuperCorna are registered trademarks of ITW Gema AG. OptiMatic, OptiMove, OptiMaster, OptiPlus, OptiMulti and Gematic are trademarks of ITW Gema AG.

All other product names are trademarks or registered trademarks of their respective holders.

Reference is made in this manual to different trademarks or registered trademarks. Such references do not mean that the manufacturers concerned approve of or are bound in any form by this manual.

We have endeavoured to retain the preferred spelling of the trademarks, and registered trademarks of the copyright holders.

To the best of our knowledge and belief, the information contained in this publication was correct and valid on the date of issue.

ITW Gema AG makes no representations or warranties with respect to the contents or use of this publication, and reserves the right to revise this publication and make changes to its content without prior notice.

### **Printed in Switzerland**

#### **ITW Gema AG**

Mövenstrasse 17  
9015 St. Gall  
Switzerland

Phone: +41-71-313 83 00

Fax: +41-71-313 83 83

E-mail: [info@itwgema.ch](mailto:info@itwgema.ch)

Home page: [www.itwgema.ch](http://www.itwgema.ch)